

SECTION 2


NAVIGATION SYSTEM: DESTINATION SEARCH

• Destination search	62
Selecting the search area	62
Destination search by Home	64
Destination search by Preset destinations	64
Destination search by "Address"	65
Destination search by "Point of Interest"	69
Destination search by "Destination Assist"	76
Destination search by "Previous Destinations"	76
Destination search by "Address Book"	77
Destination search by "Emergency"	77
Destination search by "Intersection & Freeway"	78
Destination search by "Map"	81
Destination search by "Coordinates"	82
Deleting set destinations	82
• Starting route guidance	83

Destination search —



Push the “DEST” button.

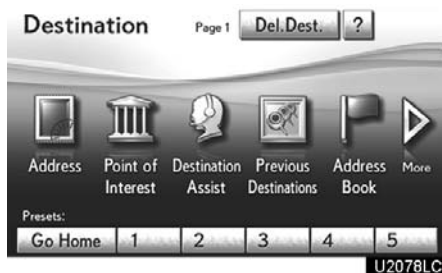


You can use one of 11 different methods to search your destination. (See pages 64 through 82.)

INFORMATION


When searching the destination, the response to the screen button may be slow.

— Selecting the search area

Change the selected region in order to set a destination from a different region by using “Address”, “Point of Interest” or “Intersection & Freeway”.

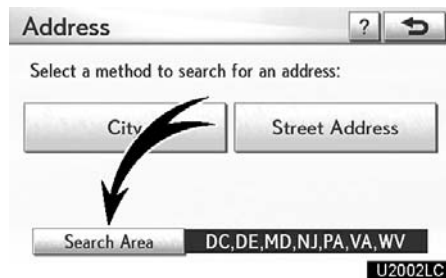

1. Touch “Search Area” to display a map of the United States and Canada divided into 15 regions. (For map database information and updates, see “Map database information and updates” on page 374.)

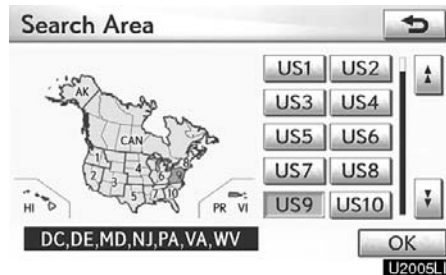

2. Touch one of “US1” through “CAN” to select a region to search.

3. Touch “OK” and the previous screen returns.


NAVIGATION SYSTEM: DESTINATION SEARCH

U.S.A.	
Button	States included in the search region
"US1"	Idaho Oregon Washington
"US2"	California Nevada
"US3"	Arizona Colorado Montana New Mexico Utah Wyoming
"US4"	Iowa Kansas Minnesota Missouri North Dakota Nebraska South Dakota
"US5"	Oklahoma Texas
"US6"	Illinois Indiana Kentucky Michigan Ohio Wisconsin
"US7"	Arkansas Alabama Louisiana Mississippi Tennessee
"US8"	Connecticut Massachusetts Maine New Hampshire New Jersey New York Rhode Island Vermont

"US9"	Washington, D.C. Delaware Maryland New Jersey Pennsylvania Virginia West Virginia
"US10"	Florida Georgia North Carolina South Carolina
"HI"	Hawaii
"AK"	Alaska
"PR"	Puerto Rico
"VI"	US Virgin Islands
Canada	
Button	Provinces and regions included in the search region
"CAN"	All provinces and regions in Canada included in this button.

— Destination search by Home

1. Push the “DEST” button.

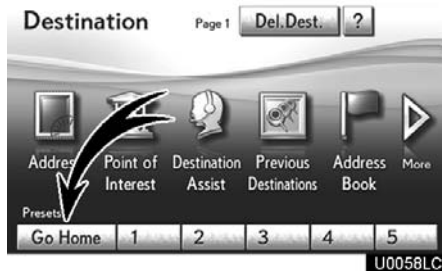

2. Touch “Go Home”.

The screen changes and displays the map location for home and the route preference. (See “Starting route guidance” on page 83.)

If home has not been registered, a message will be displayed and the setting screen will automatically appear.


To use this function, it is necessary to set a “Home” address. (To register “Home”, see page 111.)

INFORMATION

Guidance starts from the current vehicle position to your home if “OK” is touched even while driving.

— Destination search by Preset destinations

1. Push the “DEST” button.

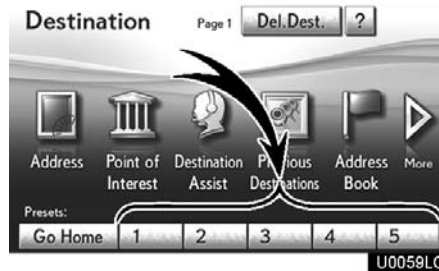

2. Touch any of the preset destination buttons on the “Destination” screen.

The screen changes and displays the map location of the preset destination point and the route preference. (See “Starting route guidance” on page 83.)

If a preset destination point has not been registered, a message will be displayed and the setting screen will automatically appear.

To use this function, it is necessary to set “Preset Destinations”. (To register “Preset Destinations”, see page 113.)

INFORMATION

Guidance starts from the current vehicle position to the preset destination point if “Go to Ⓞ” is touched even while driving.


— Destination search by “Address”

There are 2 ways to search a destination by address.

- (a) Search by city
- (b) Search by street address

1. Push the “DEST” button.

2. Touch “Address” on the “Destination” screen.

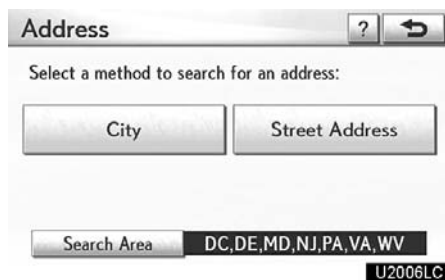


3. Touch the button for the desired method.

(a) Selecting a city to search

1. Push the “DEST” button.

2. Touch “Address” on the “Destination” screen.

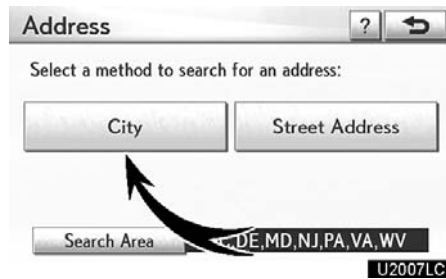

3. Touch “City”.



4. Input a city name.



5. Touch the button of the desired city name from the displayed list.

NAVIGATION SYSTEM: DESTINATION SEARCH

Street Name

Enter a street name ***

1 2 3 4 5 6 7 8 9 0

Q W E R T Y U I O P

A S D F G H J K L &

Z X C V B N M / ' -

A-Z Other Space OK

U2010LC

6. Input the street name and touch “OK”.

Street Name

CON 5 Matches

CONDON

CONGRESS

CONIFER

CONNECTICUT

CONSTITUTION

U2011LC

7. When the desired street name is found, touch the corresponding button.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 83.)

House Number

Enter a house number

N 1 2 3

W E 4 5 6

S 7 8 9

- 0 /

A-Z 0-9 Space OK

U2012LC

8. Input a house number.

Address

3 Matches

CONSTITUTION AVE NE, WASHINGT...

CONSTITUTION AVE NW, WASHINGT...

CONSTITUTION CT NW, WASHINGT...

U2013LC

If the same address exists in more than one city, the current screen changes to the address list screen.

SELECTING FROM THE LAST 5 CITIES

City Name

Enter a city name *** Last 5 Cities

1 2 3 4 5 6 7 8 9 0

Q W E R T Y U I O P

A S D F G H J K L &

Z X C V B N M / ' -

A-Z Other Space OK

U2014LC

1. Touch "Last 5 Cities".

Last 5 Cities

WASHINGTON, DC

BALTIMORE, MD

PHILADELPHIA, PA

NEW BERLIN, PA

BOSTON, VA

U2015LC

2. Touch the button of the desired city name.

If the navigation system has never been used, this function will not be available.

The current screen changes to the screen for inputting a street name. (See "(a) Selecting a city to search" on page 65.)

(b) Search by street address

1. Push the "DEST" button.
2. Touch "Address" on the "Destination" screen.

Address

Select a method to search for an address:

City Street Address

Search Area DC, NJ, PA, VA, WV

U2016LC

3. Touch "Street Address".

House Number

Enter a house number ***

N 1 2 3

W E 4 5 6

S 7 8 9

- 0 /

A-Z 0-9 Space OK

U2017LC

4. Touch numbers directly on the screen to input a house number.

After inputting a house number, touch "OK" to display the screen for inputting a street name.

Street Name

Enter a street name ***

1 2 3 4 5 6 7 8 9 0

Q W E R T Y U I O P

A S D F G H J K L &

Z X C V B N M / ' -

A-Z Other Space OK

U2018LC

5. Input the street name and touch "OK".

NAVIGATION SYSTEM: DESTINATION SEARCH

Street Name

CONN 100 Matches

CONN

CONNANT

CONNARD

CONNATSER

CONNAUGHT

U2019LC

6. When the desired street name is found, touch the corresponding button.

The screen changes and displays the map location of the selected destination and the route preference. (See "Starting route guidance" on page 83.)

If the same address exists in more than one city, the current screen changes inputting the city name or to the address list screen.

City Name

Enter a city name 74 Matches

1 2 3 4 5 6 7 8 9 0

Q W E R T Y U I O P

A S D F G H J K L &

Z X C V B N M / ' -

A-Z Other Space OK

U2020LC

7. Input a city name.

City Name

B 5 Matches

BALTIMORE, MD

BEACH HAVEN, NJ

BROWNS MILLS, NJ

BURLINGTON, NJ

BURLINGTON TWP, NJ

U2021LC

8. Touch the button of the desired city name from the displayed list.

INFORMATION

You can search for a street name using just the body.

Example : S WESTERN AVE

You can input "S WESTERN AVE", "WESTERN AVE" or "WESTERN".

— Destination search by “Point of Interest”

There are 4 ways to search by Points of Interest.

- Search by name
- Search by category
- Search by phone #
- Search by eDestination

1. Push the “DEST” button.

2. Touch “Points of Interest” on the “Destination” screen.

3. Touch the button for the desired method.

(a) Search by “Name”

1. Push the “DEST” button.

2. Touch “Point of Interest” on the “Destination” screen.

3. Touch “Name” on the “Point of Interest” screen.

4. Input the name of the Point of Interest.


5. Touch the button of the desired destination.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 83.)

When inputting the name of a specific Point of Interest, and there are two or more sites with the same name, the list screen is displayed.

INFORMATION

To search for a facility name using multiple search words, put a space between each word.

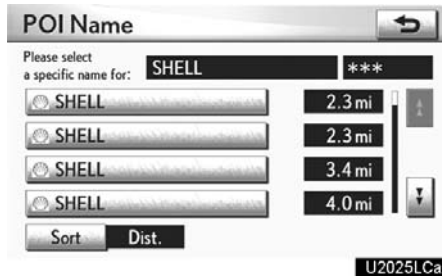

U2025LCa


Touch the button of the desired destination.

If the same name exists in more than one city, a search can be performed more easily with “City” and “Category”. (See “● Selecting a city to search” on page 70 and “● Selecting from the categories” on page 71.)

INFORMATION

The desired Point of Interest can be displayed on the map screen. (See “ — Display POI icons” on page 102.)

● Selecting a city to search

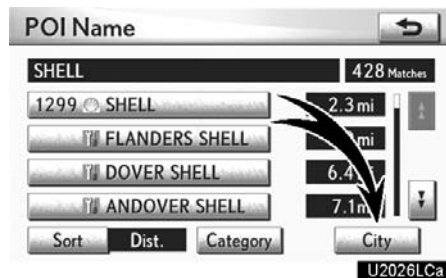

U2026LCa

1. Touch “City”.



U2027LC

2. Input the city name.




U2028LC

3. Touch the button of the desired city name from the displayed list.


INFORMATION

To cancel the city setting, touch “Any City”.

● Selecting from the categories

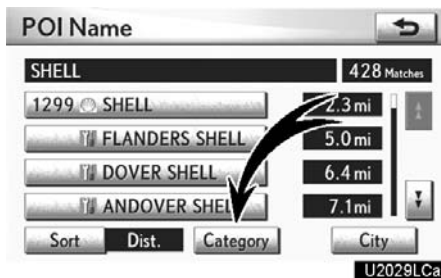


Touch “Category”.

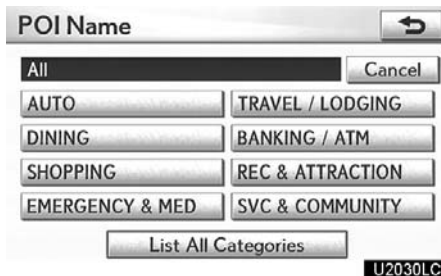

If the desired POI category is on the screen, touch the name to display a detailed list of the POI category.

If the desired POI category is not on the screen, touch “List All Categories” to list all POI categories.

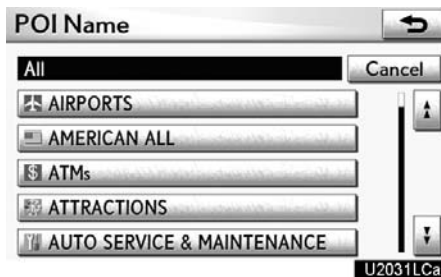

When the desired category is touched, the POI name list screen is displayed.

(b) Search by “Category”

The destination can be set by touching the search point and the POI category.

1. Push the “DEST” button.
2. Touch “Point of Interest” on the “Destination” screen.
3. Touch “Category” on the “Point of Interest” screen.



Set the search point by the following method:

1. Set the search point from near the vehicle's current position
2. Set the search point from along the chosen route
3. Set the search point from near a city center
4. Set the search point from near a destination

It is possible to display the names of POIs located within approximately 200 miles (320 km) from the selected search point.

SETTING THE SEARCH POINT FROM NEAR HERE

Touch “Near Here”.

The search point is set at the current position, and the “POI Category” screen will be displayed. (See page 74.)

SETTING THE SEARCH POINT FROM ALONG MY ROUTE

Touch “Along My Route”.

The search point is set and the “POI Category” screen will be displayed. (See page 74.)

SETTING THE SEARCH POINT FROM NEAR CITY CENTER

1. Touch “Near City Center”.

A screenshot of the 'City Name' input screen. At the top is a title bar with 'City Name' and a back arrow. Below it is a text input field containing '***' and a 'Last 5 Cities' button. Under the input field is a numeric keypad (1-0) and a QWERTY keyboard. At the bottom are buttons for 'A-Z', 'Other', 'Space', and 'OK'. A small label 'U2033LC' is at the bottom right.

2. Input the city center name.

A screenshot of the 'City Name' list screen. At the top is a title bar with 'City Name' and a back arrow. Below it is a list of city names starting with 'NEW'. The first item is 'NEW' with '108 Matches' to its right. Below it are five more items: 'NEW ALBANY, PA', 'NEW ALEXANDRIA, PA', 'NEW BALTIMORE, PA', 'NEW BEAVER, PA', and 'NEW BERLIN, PA'. To the right of the list is a vertical scrollbar with up and down arrows. A small label 'U2034LC' is at the bottom right.

3. Touch the button of the desired city center name.

The search point is set and the “POI Category” screen will be displayed. (See page 74.)

SELECTING FROM THE LAST 5 CITIES

1. Touch "Near City Center".



2. Touch "Last 5 Cities".




3. Touch the button of the desired city center name.

The search point is set and the "POI Category" screen will be displayed. (See page 74.)

SETTING THE SEARCH POINT FROM NEAR A DESTINATION

1. Touch "Near a Destination".

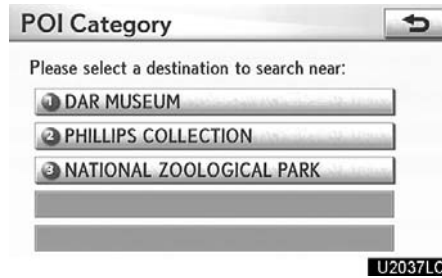


2. Touch the button of the desired destination.

The search point is set and the "POI Name" screen will be displayed. (See page 74.)

NAVIGATION SYSTEM: DESTINATION SEARCH

- **To search POIs near the search point**

When the search point is set, the "POI Category" screen will be displayed.

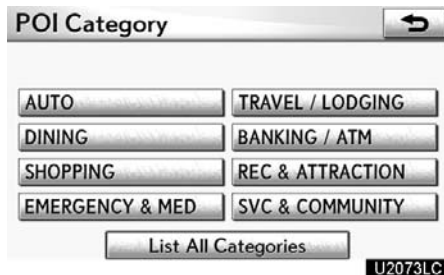


Touch the desired POI category.

If the desired POI category is not on the screen, touch "List All Categories" to list all POI categories.



Touch the desired POI category from the list.

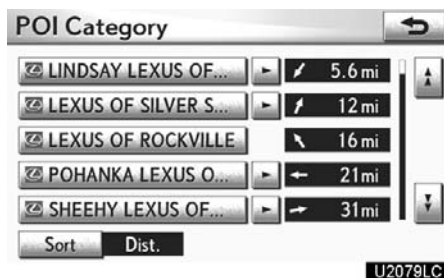

By touching the button of the desired item, the screen changes and displays the map location of the selected destination and the route preference. (See "Starting route guidance" on page 83.)

(c) Search by "Phone #"

1. Push the "DEST" button.
2. Touch "Point of Interest" on the "Destination" screen.
3. Touch "Phone #" on the "Point of Interest" screen.



4. Input a telephone number.

5. After inputting a telephone number, touch "OK".

The screen changes and displays the map location of the selected destination and the route preference. (See "Starting route guidance" on page 83.)

If there is more than one site with the same number, the following screen will be displayed.




INFORMATION

- *If there is no match for the telephone number inputted, a list of identical numbers with different area codes will be displayed.*
- *To set an address book entry as a destination using the phone number, the number must already be registered. (See page 121.)*

(d) Search by “eDestination”


1. Push the “DEST” button.
2. Touch “Point of Interest” on the “Destination” screen.
3. Touch “eDestination” on the “Point of Interest” screen.

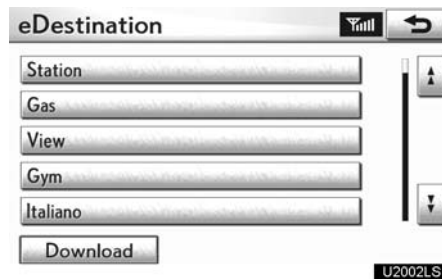

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system. You can store up to 200 locations online to access and update at any time. Your locations can be organized into up to 20 folders. (See “eDestination” on page 158.)

— Destination search by “Destination Assist”

1. Push the “DEST” button.
2. Touch “Destination Assist” on the “Destination” screen.
3. Touch “Call Dest. Assist” on the “Destination Assist” screen.

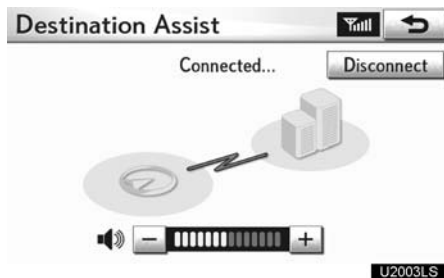

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI). After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system. (See “Destination Assist” on page 155.)

— Destination search by “Previous Destinations”

1. Push the “DEST” button.
2. Touch “Previous Destinations” on the “Destination” screen.



The previous starting point and up to 100 previously set destinations are displayed on the screen.

3. Touch the button of the desired destination.

“Delete”: To delete the previous destination. (To delete previous destinations, see page 127.)

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 83.)


INFORMATION

The list of previous destinations can also be deleted by touching “Delete Previous Dest.” on the “Navigation Settings” screen when the vehicle is stopped. (See “ — Deleting previous destinations” on page 127.)

— Destination search by “Address Book”

1. Push the “DEST” button.
2. Touch “Address Book” on the “Destination” screen.

A list of registered address book entries is displayed.

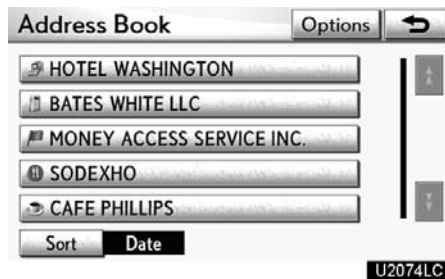

3. Touch the button of the desired address book entry.

“Options”: To register or edit address book. (See page 116.)

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 83.)

— Destination search by “Emergency”

1. Push the “DEST” button.
2. Touch “Emergency” on the second page of the “Destination” screen.


The display changes to a screen to select police stations, dealers, hospitals or fire stations. While driving, only nearby police stations, dealers, hospitals, or fire stations are shown. The current position is shown with an address, and the latitude and the longitude at the top of the screen.



3. Touch the desired emergency category.

The selected emergency category list is displayed.

NAVIGATION SYSTEM: DESTINATION SEARCH

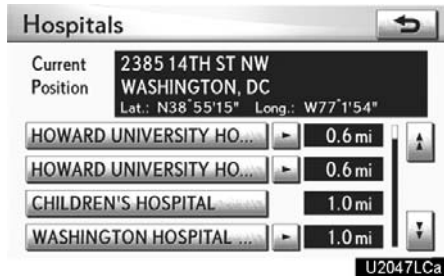

4. Touch the button of the desired destination.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 83.)

INFORMATION


The navigation system does not guide in areas where route guidance is unavailable. (See page 373.)

— Destination search by “Intersection & Freeway”

There are 2 ways to search.

- (a) Search by intersection
- (b) Search by Freeway Entrance/Exit

1. Push the “DEST” button.
2. Touch “Intersection & Freeway” on the second page of the “Destination” screen.

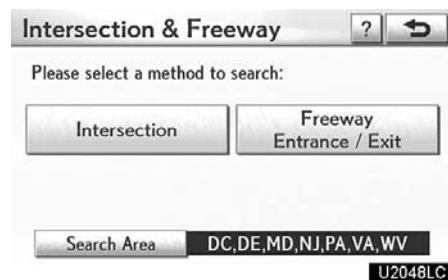

3. Touch the button for the desired method.

(a) Search by "Intersection"

1. Push the "DEST" button.
2. Touch "Intersection & Freeway" on the second page of the "Destination" screen.
3. Touch "Intersection" on the "Intersection & Freeway" screen.

First Street Name

Enter the first street name ***

1 2 3 4 5 6 7 8 9 0

Q W E R T Y U I O P

A S D F G H J K L &

Z X C V B N M / ' -

A-Z Other Space OK

U2049LC

4. Input the name of the first intersecting street which are located near the destination to be set.
5. Touch "OK".

First Street Name

Enter the first street name CAPITAL 5 Matches

CAPITAL

CAPITAL CEMENT

CAPITAL GATEWAY

CAPITAL ONE

PORT CAPITAL

OK

U2050LC

6. Touch the button of the desired item.

Second Street Name

Enter the second street name 24 Matches

1 2 3 4 5 6 7 8 9 0

Q W E R T Y U I O P

A S D F G H J K L &

Z X C V B N M / ' -

A-Z Other Space OK

U2068LC

7. Input the name of the second intersecting street.

Second Street Name

Enter the second street name A 2 Matches

CRANBURY HALF ACRE

HALF ACRE


OK

U2069LC

8. Touch the button of the desired item.

After inputting the two intersecting streets, the screen changes and displays the map location of the selected destination and the route preference. (See "Starting route guidance" on page 83.)

NAVIGATION SYSTEM: DESTINATION SEARCH

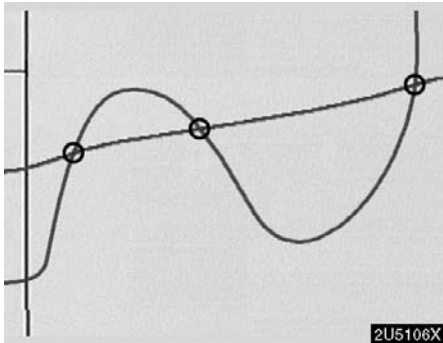

If the same two streets cross at more than one intersection, the screen changes and displays the menu to select the city name where the streets intersect. Select the city, and the map location of the selected destination and the route preference. (See "Starting route guidance" on page 83.)

(b) Search by "Freeway Entrance/Exit"

1. Push the "DEST" button.
2. Touch "Intersection & Freeway" on the second page of the "Destination" screen.
3. Touch "Freeway Entrance/Exit" on the "Intersection & Freeway" screen.

Freeway Name 

Enter a freeway name 522 Matches

1 2 3 4 5 6 7 8 9 0 

Q W E R T Y U I O P

A S D F G H J K L &


Z X C V B N M / ' -

A-Z Other Space OK

U2051LC

4. To input a freeway name.

Be sure to use the complete name of the freeway or highway, including the hyphen, when entering the destination. Freeways and interstates use an "I" (I-405). US highways use the state designation before the number (CA-118).

Freeway Name 

I-95 5 Matches

I-95 EXPRESS LN N

I-95 EXPRESS LN S

I-95 HOV LN

I-95 N

I-95 S

U2052LC


5. Select the desired freeway by touching the button.

— Destination search by “Map”


1. Push the “DEST” button.
2. Touch “Map” on the second page of the “Destination” screen.



6. Either a freeway “Entrance” or “Exit” can be selected.

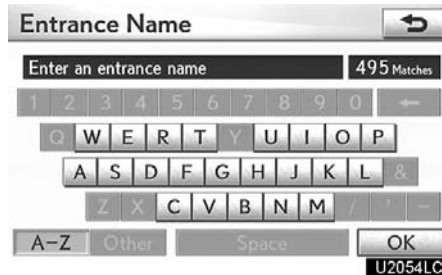

7. Input a freeway entrance or exit name.
8. Touch “OK”.

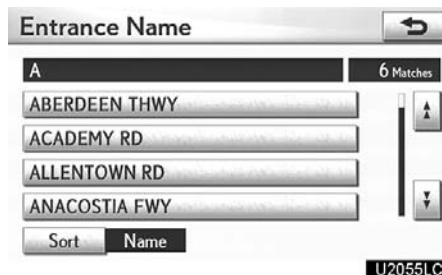

9. Touch the button of the desired entrance or exit name.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 83.)




The screen changes and displays the map location that was previously displayed just before the destination input operation and the route preference. (See “Starting route guidance” on page 83.)

INFORMATION

Guidance starts if “OK” is touched even while driving. However, the cursor cannot be moved.

— Destination search by “Coordinates”

1. Push the “DEST” button.
2. Touch “Coordinates” on the second page of the “Destination” screen.

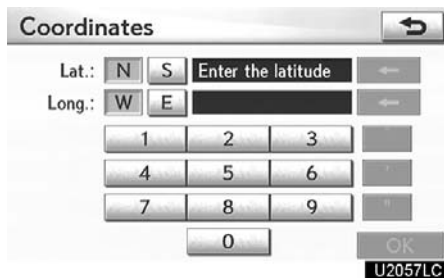

3. Input the latitude and the longitude.
4. When the input is finished, touch “OK”.

By touching the button of the desired point, the screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 83.)

— Deleting set destinations

A set destination can be deleted.

1. Push the “DEST” button.
2. Touch “Del. Dest.” on the “Destination” screen.

When more than one destination is set, a list will be displayed on the screen.



3. Touch the destination for deletion.

“Select All”: To select all destinations on the list.

“Unselect All”: To unselect all of the selected destinations.

4. Touch “Delete”.



A message appears to confirm the request to delete.

5. To delete the destination(s), touch “Yes”.

If “Yes” is touched, the data cannot be recovered.

If “No” is touched, the previous screen will return.


The system searches for the guidance route again, and displays the entire route.

INFORMATION

Set destinations can also be deleted by touching "Route". (See " — Deleting destinations" on page 95.)

Starting route guidance

After inputting the destination, the screen changes and displays the map location of the selected destination and the route preference.

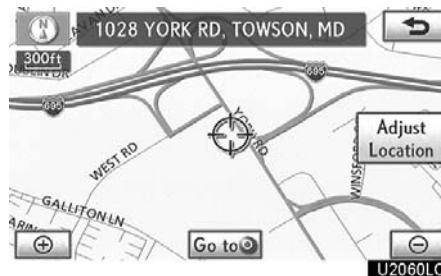

1. Scroll the map to the desired point.

"Adjust Location": To adjust the position in smaller increments.



When an arrow facing the desired point is touched, the map scrolls in that direction.

The scroll stops when the selection of the arrow is released.

2. Touch "Go to" button.

The system starts route search and displays recommended routes.


If there is already a set destination, **"Go to"** and **"Add to Route"** are displayed.

"Go to": To delete the existing destinations and set a new one.

"Add to Route": To add a destination.

"Info.": If this button is displayed on the top of the screen, touch it to view items such as name, address, and phone number.

NAVIGATION SYSTEM: DESTINATION SEARCH

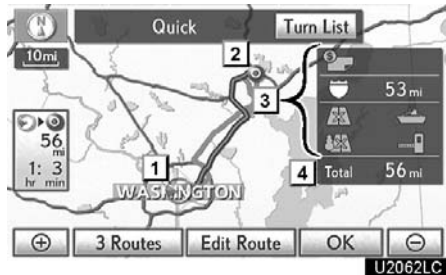

- 1 Current position
- 2 Destination point
- 3 Type of the route and the distance
- 4 Distance of the entire route

3. To start guidance, touch "OK".

"Turn List": The following screen displays the list of the roads up to the destination.

"3 Routes": To select the desired route from 3 possible routes. (See page 85.)

"Edit Route": To change the route. (See page 86.)


INFORMATION

- Guidance can be paused or resumed. (See "— Pausing and resuming guidance" on page 101.)
- If "OK" is touched until a beep sounds, demo mode will start. Push the "MAP/VOICE" button to finish Demo mode.
- The route for returning may not be the same as that for going.
- The route guidance to the destination may not be the shortest route nor a route without traffic congestion.
- Route guidance may not be available if there is no road data for the specified location.
- When setting the destination on a map with a scale larger than 0.5 miles (800 m), the map scale changes to 0.5 miles (800 m) automatically. Set the destination again.
- If a destination is entered, the road nearest to the point you selected is set as the destination.


CAUTION

Be sure to obey traffic regulations and keep road conditions in mind while driving. If a traffic sign on the road has been changed, the route guidance may not indicate such changed information.

3 ROUTES SELECTION

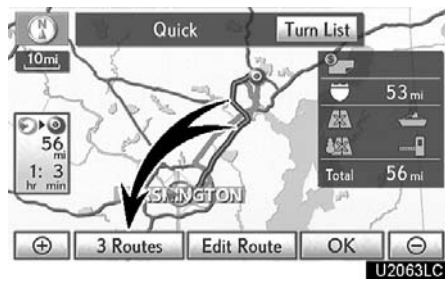

1. To select the desired route from 3 routes, touch “3 Routes”.

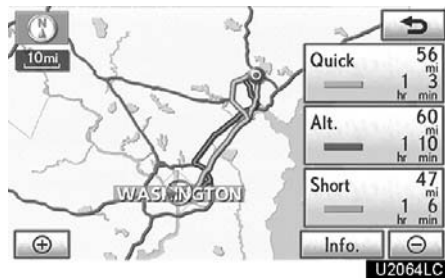

2. Touch “Quick”, “Alt.” or “Short” to select the desired route.

“Quick”: Recommended route.
This route is indicated by an orange line.

“Alt.”: Alternative route.
This route is indicated by a purple line.

“Short”: A route by which you can reach the destination in the shortest distance.
This route is indicated by a green line.

“Info.”: To display the following information about each of the 3 routes.


3 Routes Info.			
	Quick	Alt.	Short
1	1 h 3 min	1 h 10 min	1 h 6 min
2	56 miles	60 miles	47 miles
3			
4	53 miles	53 miles	32 miles
5			

U2065LC

- 1 Time necessary for the entire trip
- 2 Distance of the entire trip
- 3 Toll road
- 4 Freeway
- 5 Ferry

● Edit route

You can again designate the conditions of the route to the destination.

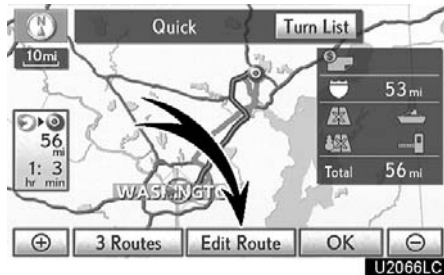

INFORMATION

- *Even if the “Freeways” indicator is dimmed, the route cannot avoid including a freeway in some cases.*
- *If the calculated route includes a trip by ferry, the route guidance shows a sea route. After you travel by ferry, the current vehicle position may be incorrect. Upon reception of GPS signals, it is automatically corrected.*

Touch “Edit Route”.



“**Add**”: To add destinations. (See page 94.)

“**Delete**”: To delete destinations. (See page 95.)

“**Reorder**”: To reorder destinations. (See page 94.)

“**Preferences**”: A number of choices are provided on the conditions which the system uses to determine the route to the destination. (See page 99)